

# PRESSALIT.

#### **Pressalit Connexion 980**

#### Toilet seat with soft close and Polygiene®, incl. hinge in stainless steel

Features Soft close

1tem number 980011-DE9999

EAN:5708590346816

Pressalit Connexion features an attractive minimalist design and is delivered with soft close. Is designed

specially for Ideal Standard Connect.

Colour White

**Description** PRESSALIT toilet seat with cover, model "Pressalit


Connexion", art. no. 980 made of colour ingrained duroplast with polygiene incl. DE9 universal hinge,

combi, in stainless steel.


- centre distance: 117-195 mm

- load - ring seat 240 kg

- 10 year guarantee

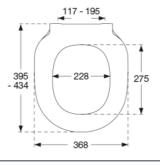



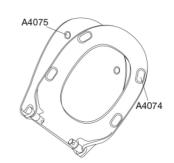

Design type

Sandwich

Designer

Pressalit

Design year

2016



## PRESSALIT.

Pressalit Connexion 980 Toilet seat with soft close and Polygiene®, incl. hinge in stainless steel

Materials TOILET SEAT:

The material is colour ingrained duroplast (UF A 10 = urea formaldehyde) that contains no environmentally hazardous substances. UF plastic comprises 67% urea formaldehyde resin, 28% cellulose, as well as 5% minerals, pigments, lubricants and moisture content. The raw material from the supplier contains up to 0.03% free formaldehyde and even less following curing.

POLYGIENE (only relevant for toilet seats with polygiene):

Polygiene consists of biocide silver chloride, which has an anti-bacterial effect. This is why the bacteria growth is hampered 24 hours a day.

**BUFFERS**:

EVA (copolymer made of ethylene and vinyl acetate).

DAMPER KIT (only relevant for toilet seats with soft close):

Hydraulic damper with stainless steel damper casing and thermoplastic parts.

MOUNT/HINGES:

Stainless steel model W. no. 1.4301/M and thermoplastic.

Product capacity Load - ring seat 240 kg

Weight 2,662 kg

Carton size 457x389x68 mm

Gross weight 3,052 kg

**Crate size** 469x401x348 mm

Weight per crate 15,26 kg

Qty per crate 5

Crates per pallet 18

Qty per pallet 90

Cleaning Use a mild soap solution to clean the seat. Please take care that the seat and hinges are

not left damp. Dry off any residual water or cleaning agent with a soft cloth. Avoid contact of the seat and hinges with abrasive, corrosive or chlorine-based cleaners, as these may cause damage or lead to flash rust. Therefore, when cleaning the bowl, make sure that the seat and cover are kept in an upright position until all cleaning agent has

been flushed away.



## PRESSALIT.

Pressalit Connexion 980 Toilet seat with soft close and Polygiene®, incl. hinge in stainless steel

#### Warranty

Your Pressalit toilet seat is subject to a 10-year product warranty against presentation of receipt. You should contact the dealer or store where you purchased the seat in the event of a complaint.<br/>

| Strict | Stri

Subject to changes in the product range, technical changes and printing errors.

pressalit.com

Pressalit A/S Pressalitvej 1 DK-8680 Ry Tel.: +45 8788 8788 Fax: +45 8788 8789 E-mail: pressalit@pressalit.com

PRESSALIT: