




PRESSALIT®

Product Item number	Lift for worktop, manually height adjustable RK1110
Product description	<div> <div> EAN:5708590292755 HMI: 54799 </div> <div>  </div> </div> <p>The name INDIVO relates to the individual configuration of the products.</p> <p>Manual lift for worktop Lift for worktop, with a crank handle Including 2 brackets Lengths from 600-1000mm. Height adjustable 300mm. Incl. mounting kit for brick wall Please state desired length when ordering</p>
Adjustability Product capacity	Height adjustable Maximum load (evenly distributed): 100 kg including worktop.
Materials Ergonomy	<p>Material: Telescopic leg: Aluminium, ABS plastic Cross braces: Aluminium Brackets: Steel Crank handle: Steel Surface treatment: Brackets: Powder lacquered (grey RAL 9006)</p> <p>Kitchen worktops which can be adjusted in height using a crank handle are the budget solution for kitchens catering to both seated and standing users. These are most commonly used in kitchens which do not require frequent, daily adjustment.</p>

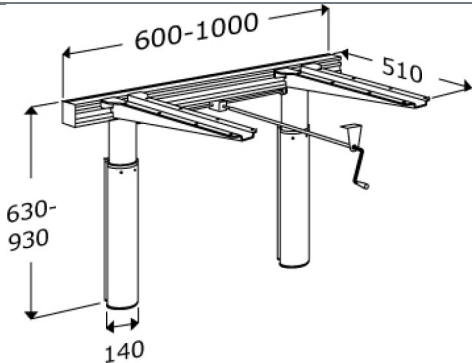

PRESSALIT®

Product Item number	Lift for worktop, manually height adjustable RK1110
Features	<p>Manual lifts are adjusted in height using a crank handle. They can be used with worktops, with or without an edge. The crank handle socket can be positioned anywhere along the front edge, except under a sink or hob. Lifts can be adapted to most standard kitchen components. Lifts are available for worktops of any length between 600 mm and 3000 mm. Height adjustable 300 mm.</p>
Warranty Cleaning	<p>Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.</p> <p>INDIVO lift for kitchen worktop. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS: Clinimax Difficil-S Erisan OXY+ Sprit (husholdningssprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättssprit 70%</p> <p>NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>



PRESSALIT®

Product	Lift for worktop, manually height adjustable
Item number	RK1110

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®