




# PRESSALIT®

<b>Product</b> <b>Item number</b>	Lift for worktop, manually height adjustable RK1182
<b>Product description</b>	<p> EAN:5708590293813  HMI: 61271 </p>  <p> The name INDIVO relates to the individual configuration of the products. </p> <p> Manual lift for freestanding worktop.  For worktops from 2001 - 2400 mm.  Height adjustable 300 mm.  Including 2 telescopic legs, brackets, longitudinal and cross braces and crank handle.  Pressalit recommends overhang of 400 mm at either end of worktop to allow for ease of approach in wheel-chair.  Please state desired length when ordering. </p>
<b>Adjustability</b> <b>Product capacity</b>	Height adjustable Maximum load (evenly distributed): 100 kg including worktop.
<b>Materials</b>  <b>Ergonomy</b>	<p> Material:  Telescopic leg: Aluminium, ABS plastic  Cross braces: Aluminium  Brackets: Steel  Crank handle: Steel  Surface treatment:  Brackets: Powder lacquered (grey RAL 9006) </p> <p> A manual, freestanding Indivo solution is the budget choice when you need a work or dining table which can be adapted to the given user or situation.  A freestanding worktop can also be used in rooms in which the walls are not strong enough to support the wall-mounted models. </p>

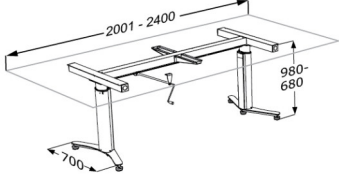

# PRESSALIT®

<b>Product</b>	Lift for worktop, manually height adjustable
<b>Item number</b>	RK1182
<b>Features</b>	<p>Lift heights are adjusted in height using a crank handle.</p> <p>Manual lifts may be used with worktops with or without an edge.</p> <p>The crank handle socket can be positioned anywhere along the long sides of the worktop.</p> <p>The design of the legs and feet make the table stable and secure, and ensure the lift causes minimal inconvenience to wheelchair users.</p> <p>The design of the lift makes it possible to use the worktop from all sides.</p> <p>Height adjustable over a range of 300 mm.</p> <p>Available for worktops of any length between 1400 mm and 3000 mm.</p>
<b>Warranty</b>	Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.



<b>Product</b>	Lift for worktop, manually height adjustable
<b>Item number</b>	RK1182
<b>Cleaning</b>	<p>INDIVO lift for kitchen worktop. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p><b>DISINFECTANTS:</b> Clinimax Difficil-S Erisan OXY+ Sprit (husholdningssprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70%</p> <p><b>NON-DISINFECTANTS:</b> Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p><b>DECALCIFICATION OF ALUMINUM PARTS:</b> Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>



# PRESSALIT®

<b>Product</b>	Lift for worktop, manually height adjustable
<b>Item number</b>	RK1182

---

[pressalit.com](http://pressalit.com)

---

Pressalit A/S  
Pressalitvej 1  
DK-8680 Ry  
Tel.: +45 8788 8788  
Fax: +45 8788 8789  
E-mail: [pressalit@pressalit.com](mailto:pressalit@pressalit.com)

# PRESSALIT®